



# Installation instructions for the Leica M10

## Firmware 1.9.4.0

### Update Contents

Model Number	LEICA M10
Update Version	1.9.4.0
Update Filename	M10-1.9.4.0-CUSTOMER.FW

### Overview

Version	Description
Version 1.9.4.0	<p>With the previous firmware 1.7.4.0 a larger selection of SD cards were made compatible with the Leica M10.</p> <p>Unfortunately we discovered, that in certain cases, the firmware 1.7.4.0 could produce black images when using short exposure times.</p> <p>This bug has now been fixed with firmware 1.9.4.0.</p> <p>All improvements from previous firmware versions are included in firmware 1.9.4.0.</p> <p><b>We apologize for any inconveniences this may have caused.</b></p>



**Please follow these steps to install the new firmware for your Leica M camera:**

Recharge the battery to 100% and insert the battery into the camera.

1. Download the new firmware file to your computer.
2. Prepare the SD card for installation:
  - a. Please make sure that the card contains at least 200 MB of free disk space.
  - b. It is recommended to format the card inside the camera before continuing.
  - c. Download the new firmware file to your computer.
  - d. Copy the firmware file to the root directory of the SD card.
  - e. Eject the SD card properly from your computer.
3. Insert the SD card into the camera and switch the camera on.
4. Go to Main Menu / Camera Information / Camera Firmware
5. Press "Yes" to confirm and start the process;
  - a. Please confirm to save your current profiles to SD card before proceeding with the update.
  - b. Wait until the update installation is completed.
  - c. Restart the camera, do not eject the SD card.
  - d. Please load your last profiles from the SD card after the first startup.
6. The update process is complete.

**CAUTION:**

Please do **NOT** turn off your camera or remove the battery or SD memory card while the update is running.

**DISREGARDING THIS ADVICE CAN CAUSE SERIOUS DAMAGE TO YOUR CAMERA!**