




LEICA S

Quickstart guide


TABLE OF CONTENTS

CHARGE BATTERY	4
INSERT BATTERY	4
INSERT MEMORY CARD	5
MOUNT & UNMOUNT LENS	5
OPERATION ELEMENTS	6
INTERFACES	7
BOTTOM VIEW	7
VIEWFINDER	8
STATUS SCREEN	9
TOP DISPLAY	10
SWITCH ON CAMERA	11
TAKING PHOTOS / VIDEO RECORDING	11
VIDEO SETTINGS	12
VIDEO STORAGE	13
ENTER STATUS SCREEN & PLAY MODE	14
ENTER MENU & PLAY MODE	14
MENU	15
MENU - QUICK ACCESS	16
BASIC CAMERA SETUP	17
PLAY MODE PHOTO	18
PLAY MODE VIDEO	19
PLAY MODE	20
EXPOSURE CONTROL MODES	21
LIVEVIEW PHOTO	22
LIVEVIEW PHOTO - SCREENS	23
LIVEVIEW VIDEO	24
LIVEVIEW VIDEO - SCREENS	25
WLAN SETUP	26
WLAN CONNECTION TO SMARTPHONE/TABLET	27
TETHERED SHOOTING - ADOBE™ PHOTOSHOP™ LIGHTROOM™ WORKFLOW	28
TETHERED SHOOTING - LEICA IMAGE SHUTTLE™ WORKFLOW	30
MENU LIST	31


CHARGE BATTERY

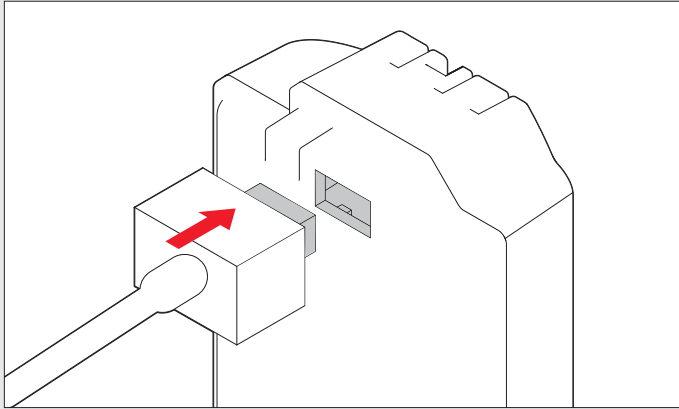


INSERT BATTERY

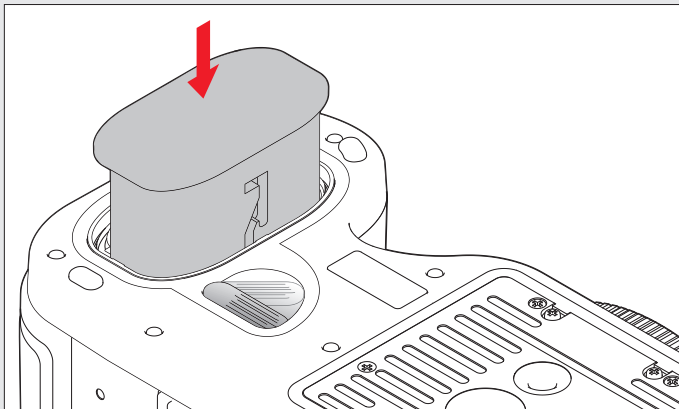



INSERT MEMORY CARD

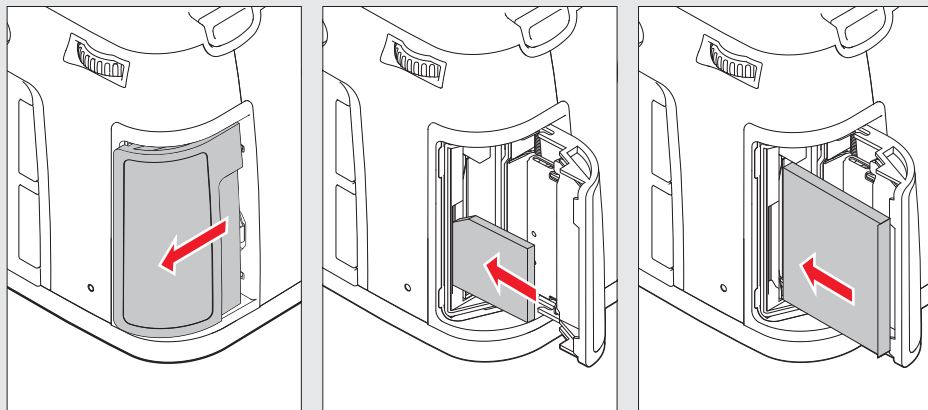


MOUNT & UNMOUNT LENS

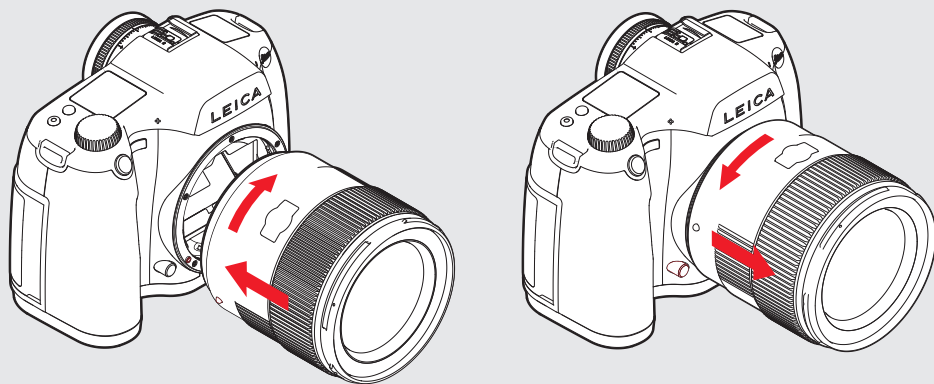


OPERATION ELEMENTS

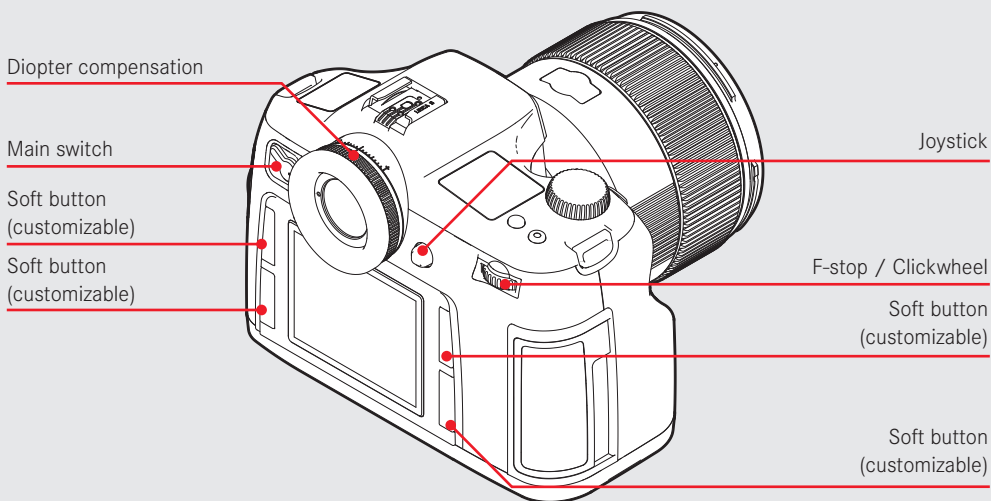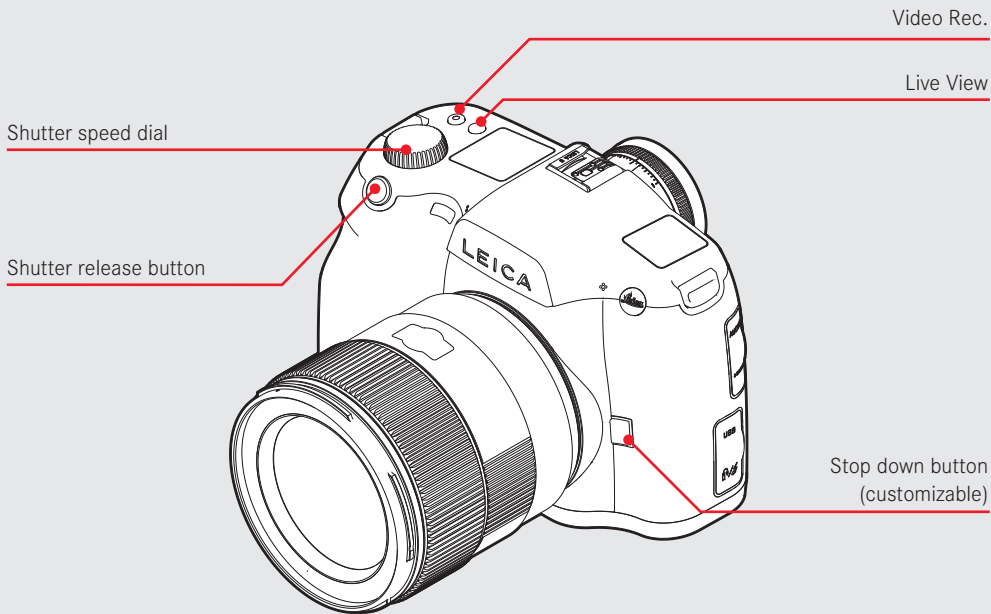


INTERFACES

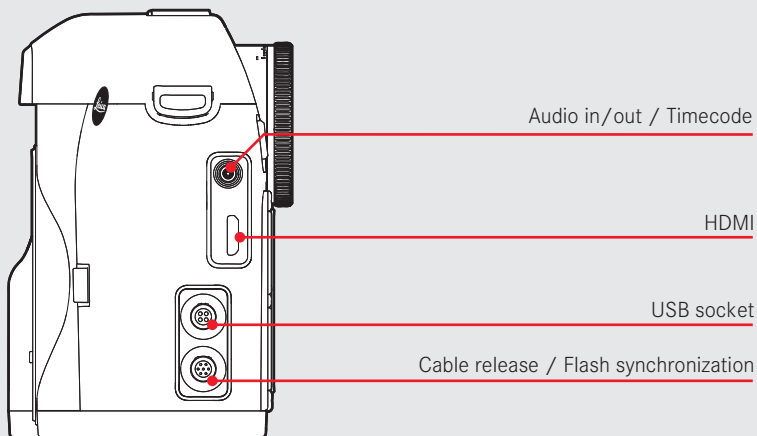

BOTTOM VIEW

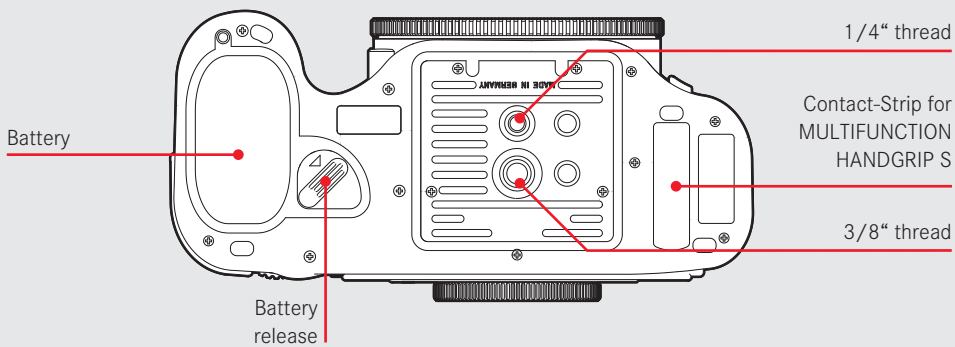

VIEWFINDER

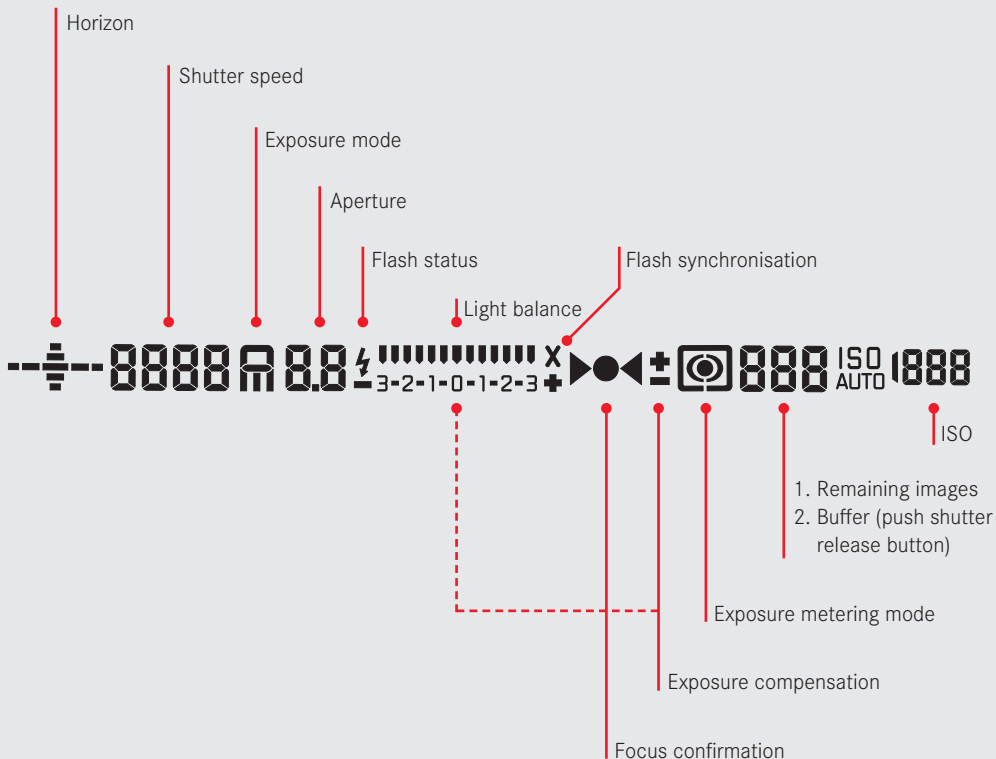

Exposure mode:

P : Automatic program
A : Aperture priority


T : Shutter speed priority
m : Manual exposure

Exp. Metering Mode:



 : Multi-field
 : Center-weighted

 : Spot

STATUS SCREEN

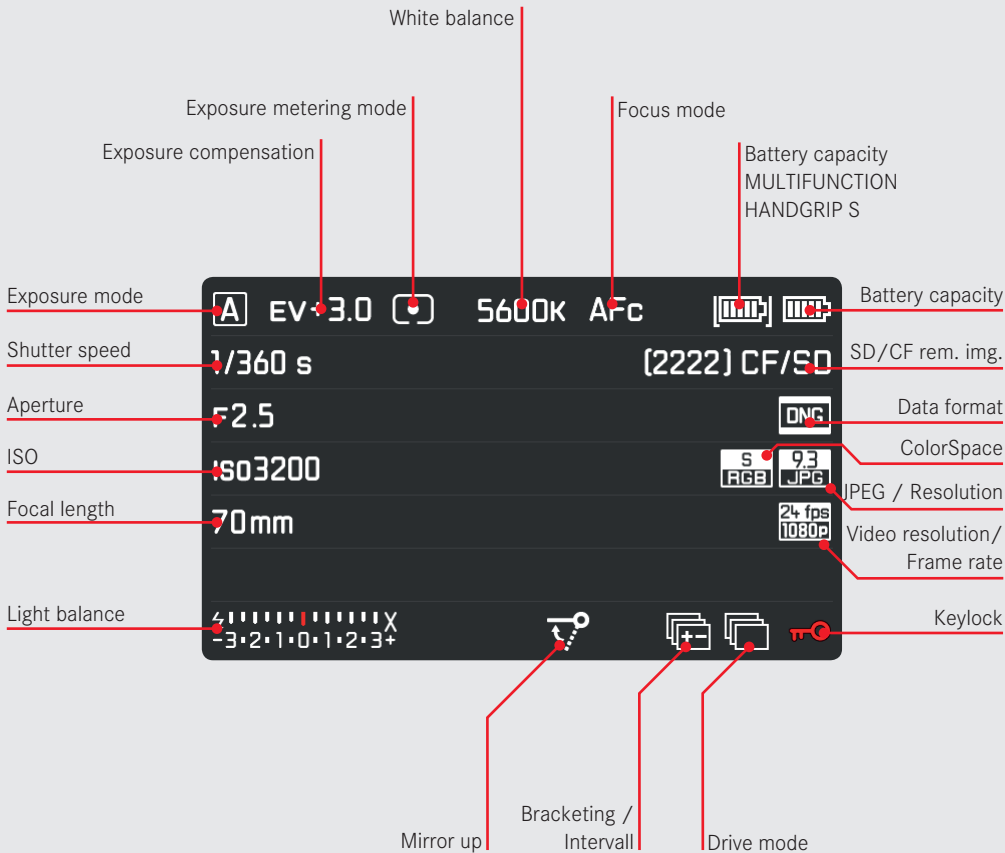


TOP DISPLAY

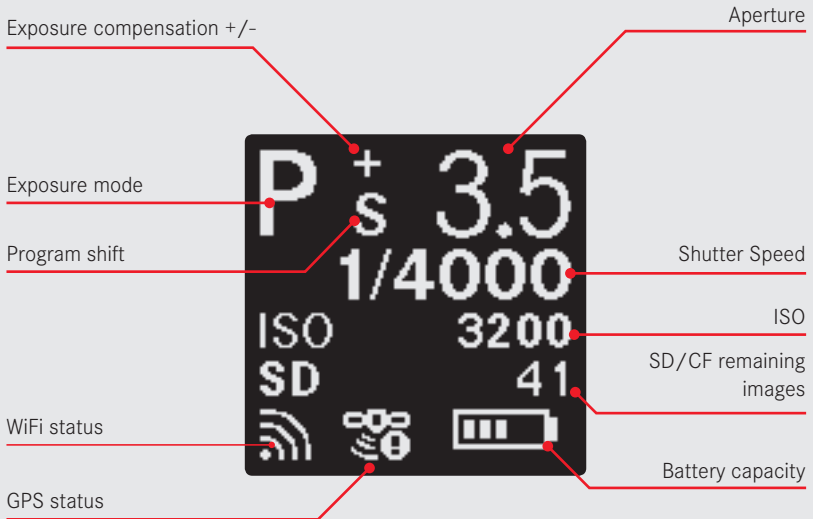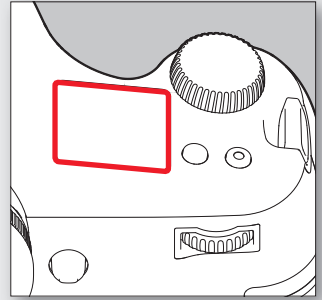

SWITCH ON CAMERA

Main switch	Shutter speed	Flash sync
FPS (Focal plane shutter)	all	up to 1/125s
CS (Central shutter)	8s to 1/1000s	up to 1/1000s

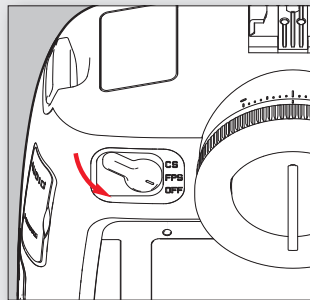

TIP


After booting, the camera will be in Record Mode. Most sequences of this Quick Start Guide will begin in this state.

TAKING PHOTOS / VIDEO RECORDING

Start/Stop
Video recording

Two step Shutter Release


1. Step: AF start / AE activation
2. Step: Release Shutter

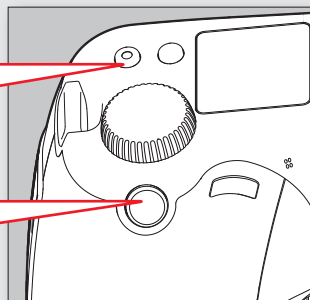

TIP


Press the shutter release button halfway to exit menus and return to Record mode.

VIDEO SETTINGS

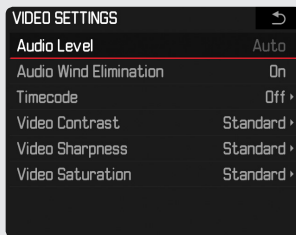


	24 fps	25 fps	30 fps	Crop factor
4K (4096 x 2160 px)	●	●	●	(approx. 1.5) ≈ Super 35mm
Full HD (1920 x 1080 px)	●	●	●	Whole sensor width

VIDEO STORAGE

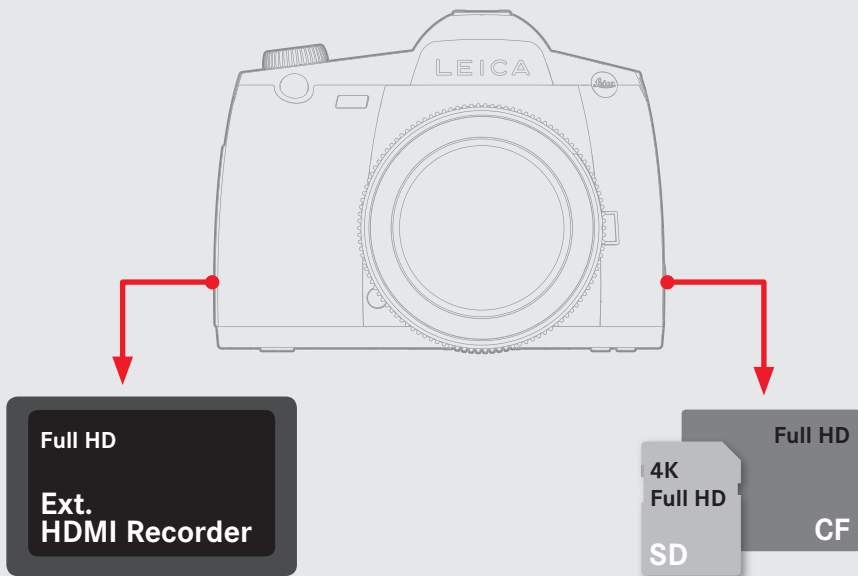

EXTERNAL AUDIO


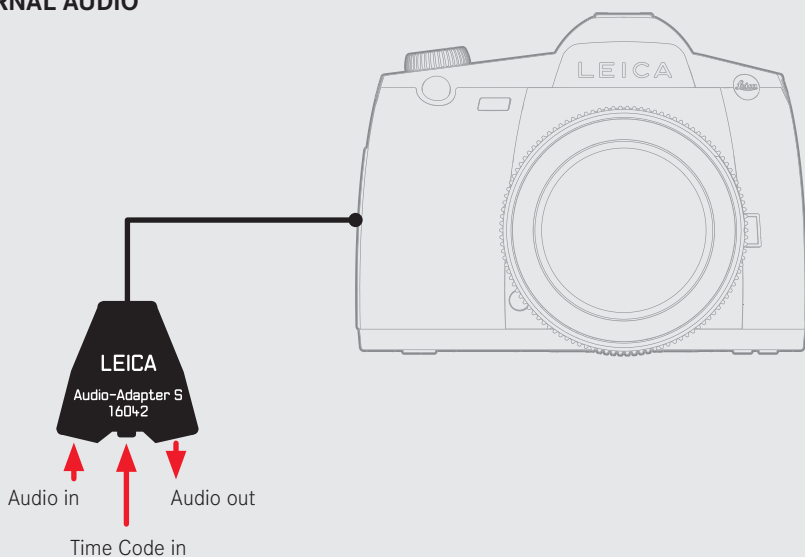


ENTER STATUS SCREEN & PLAY MODE

Status Screen




Play Mode

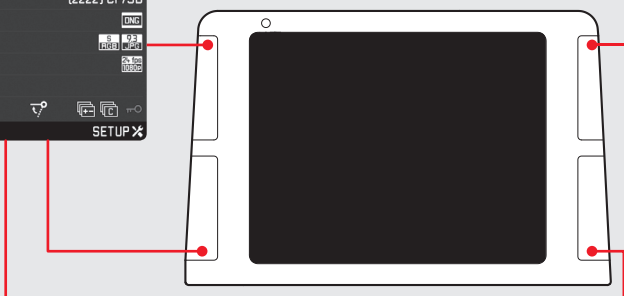
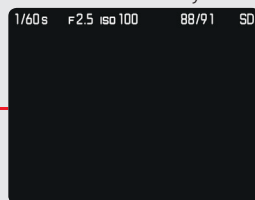


ENTER MENU & PLAY MODE

Section CAMERA

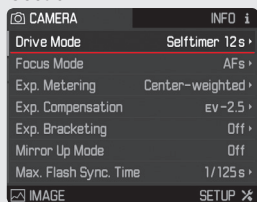


Play Mode

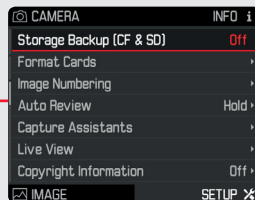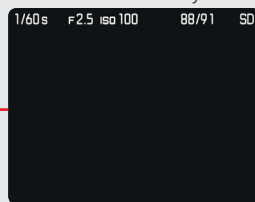

Section IMAGE

Section SETUP

MENU

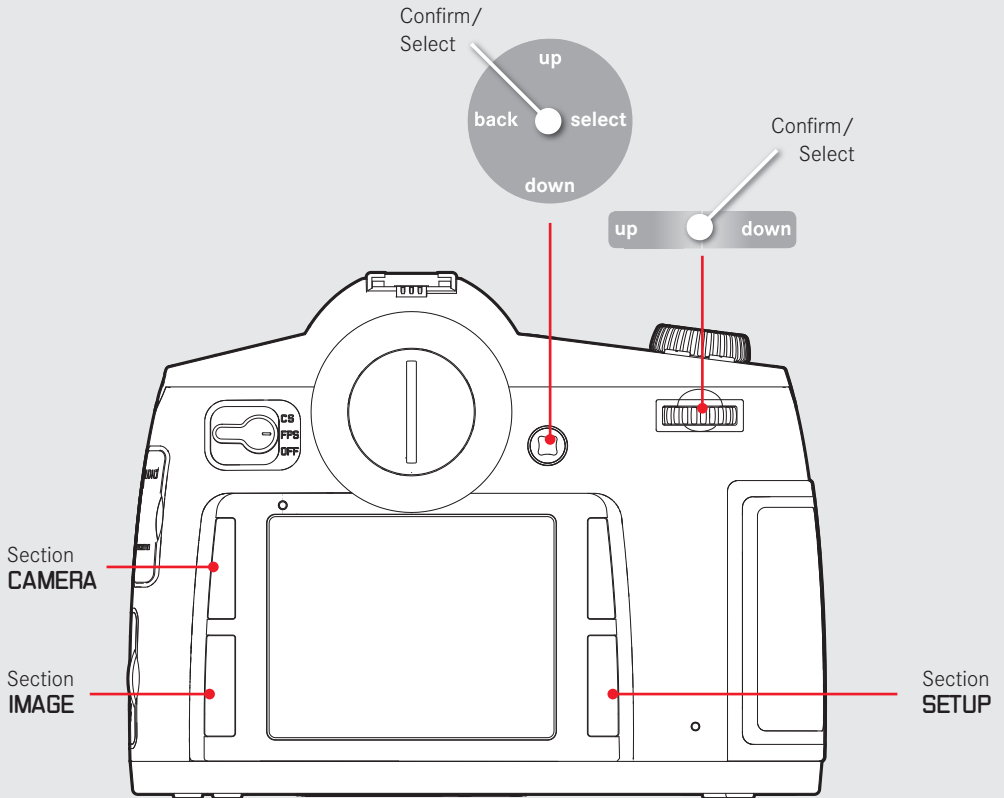


TIP

Press the shutter release button halfway to exit menus and return to Record Mode.

MENU - QUICK ACCESS

Long push (1 sec.) leads you straight to your favorite submenu.

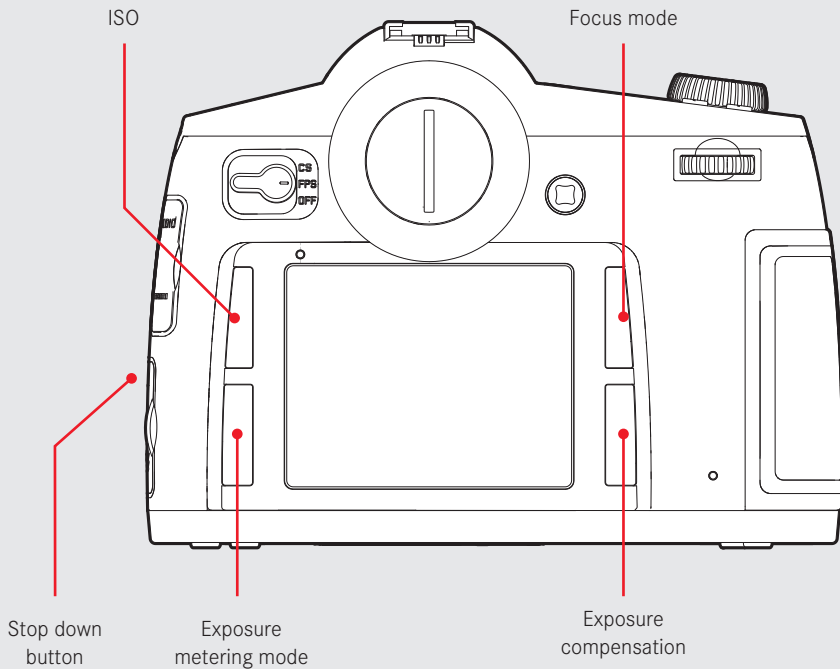



TIP

Setup the buttons to your needs in the submenu CUSTOM FUNCTIONS.



In LiveView the Stop Down button is reserved for activate/deactivate **Exposure Simulation!**

BASIC CAMERA SETUP


Language

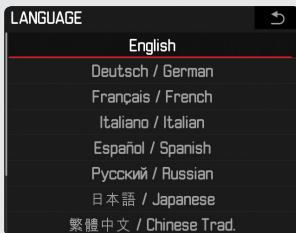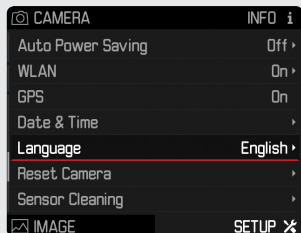

Format Card

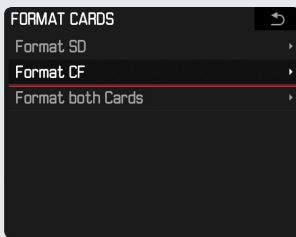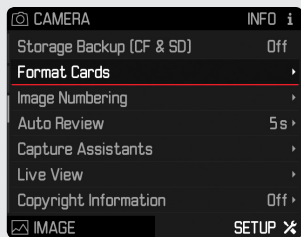

Storage Backup

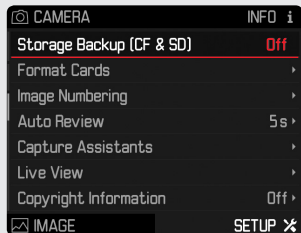


TIP

If Storage Backup is set, the files will be stored simultaneously either on both memory cards (CF&SD) or while shooting tethered on memory card (CF or SD) and on the PC's harddrive.


File Format





PLAY MODE PHOTO

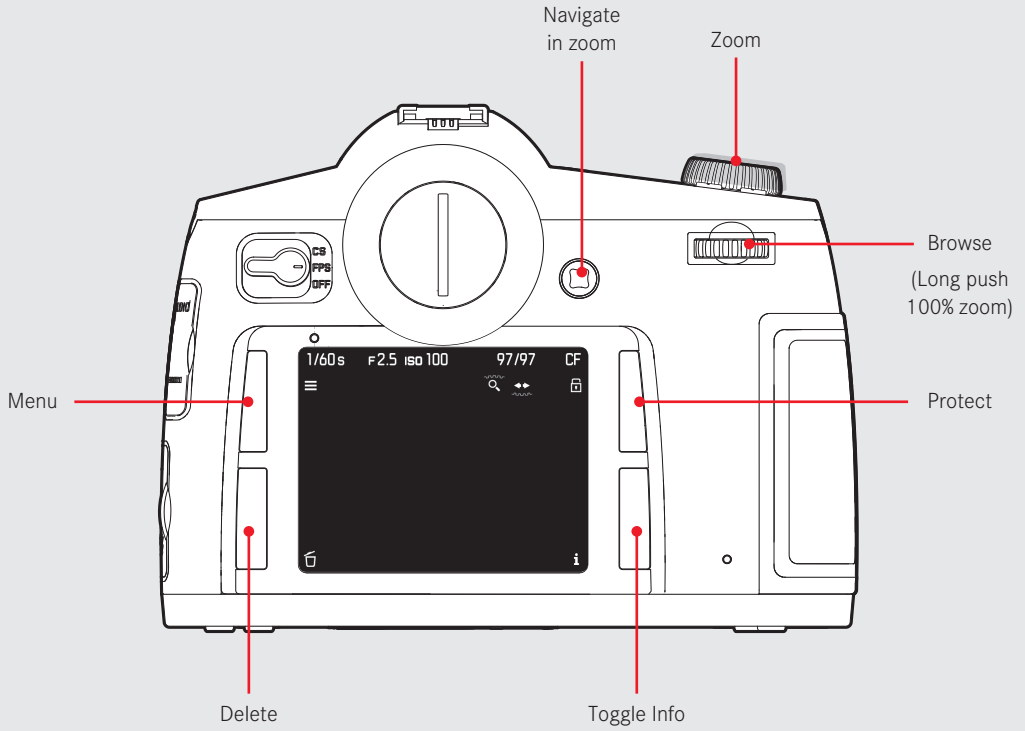

PLAY MODE VIDEO

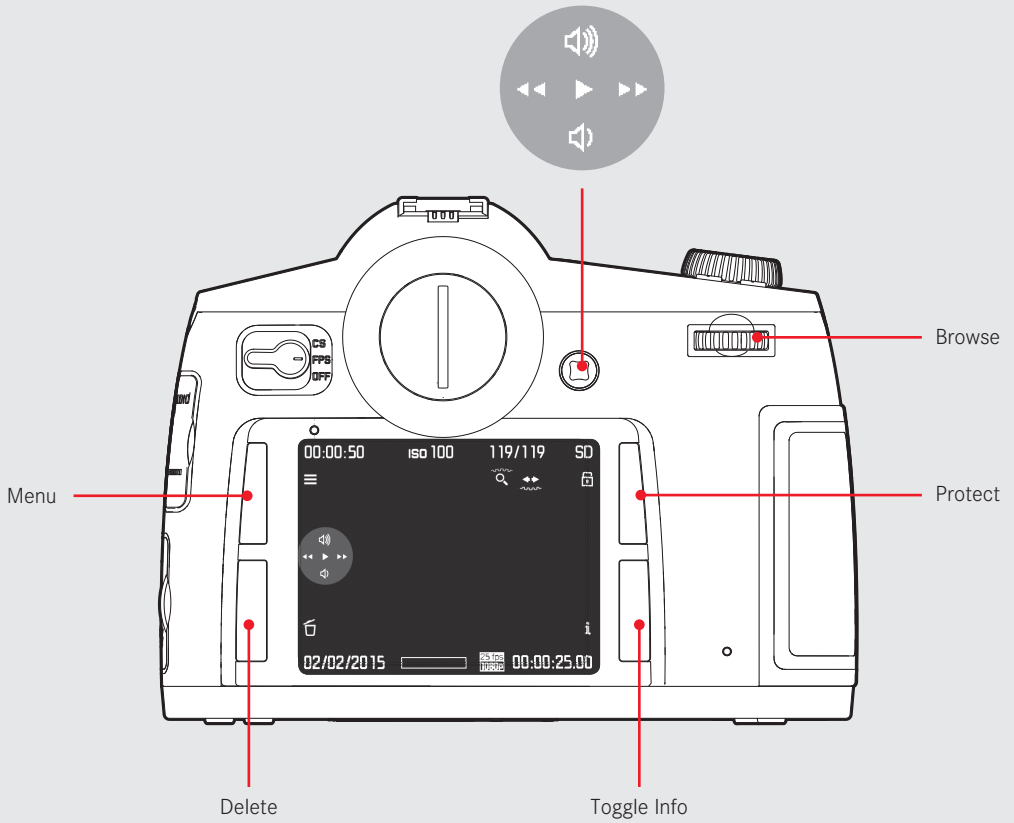

PLAY MODE

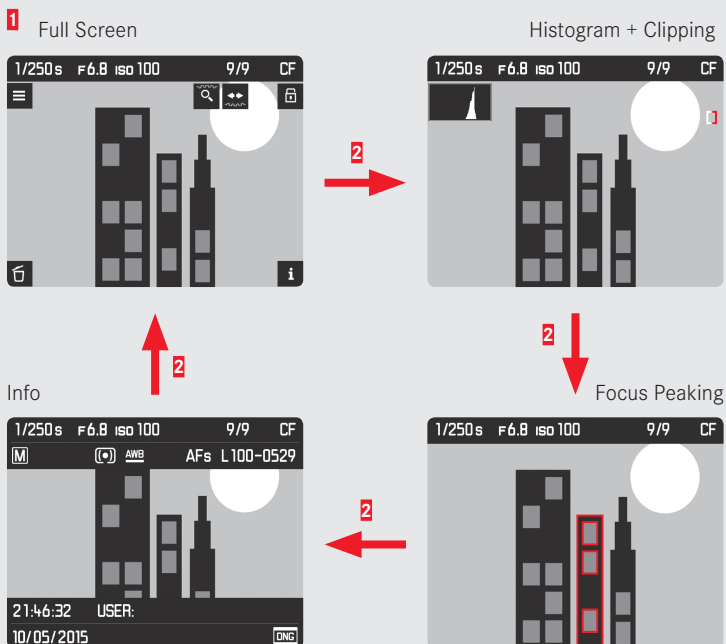
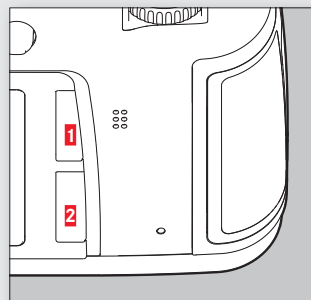


TIP

Camera always shows the latest mode after coming back to **Play** Mode. Histogram represents the visible area of the image. Customize the clipping settings under menu **CLIPPING DEFINITION**.

EXPOSURE CONTROL MODES




- long push to access setting
- Turn to switch modes

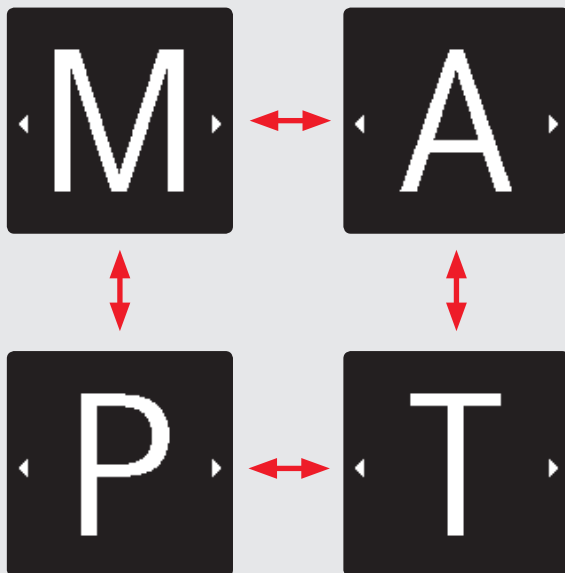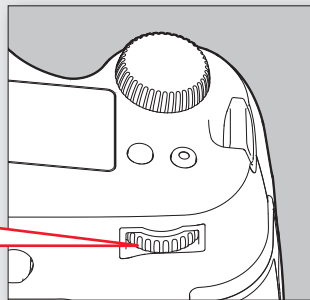


TIP

To exit exposure mode function press one of the soft buttons, the click wheel or shutter button 1st step.


LIVEVIEW PHOTO

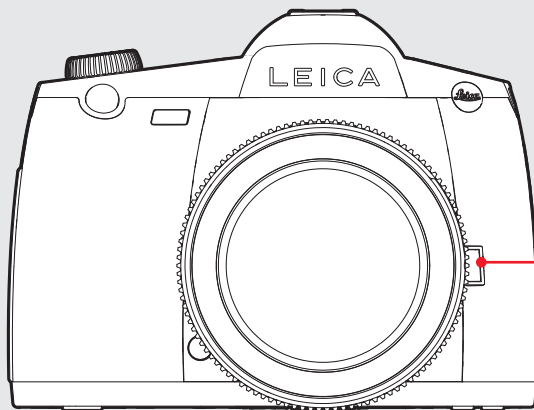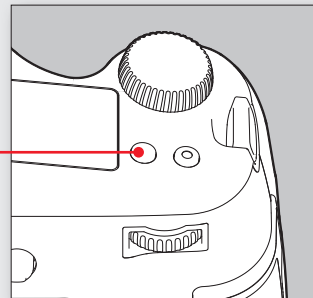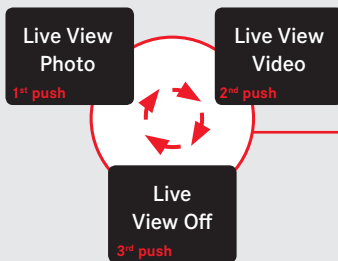


Start/Stop exposure simulation

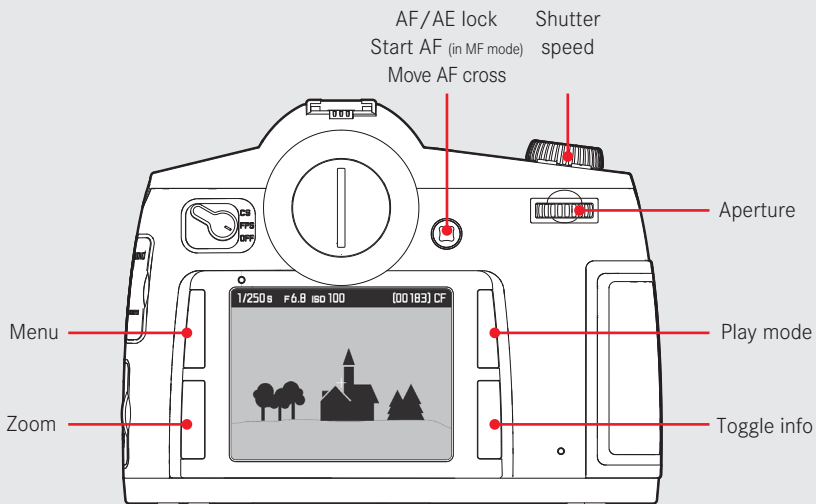


LIVEVIEW PHOTO - SCREENS

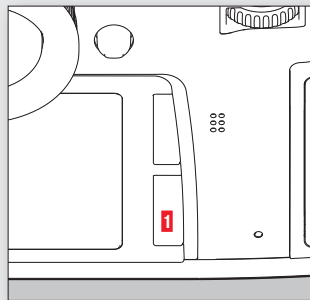


Full Screen

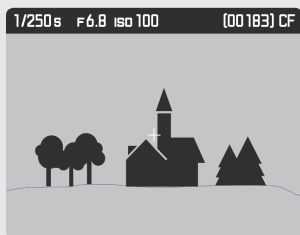


Histogram + Clipping

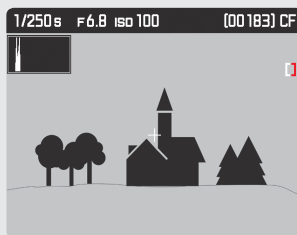


Info

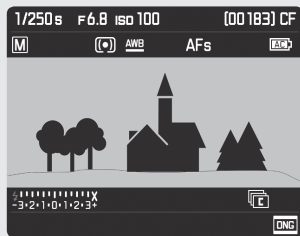




Focus Peaking

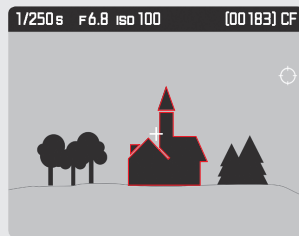


Grid + Horizon

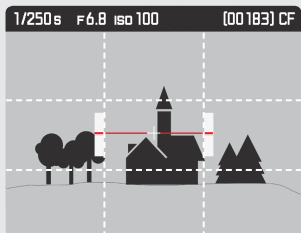


LIVEVIEW VIDEO

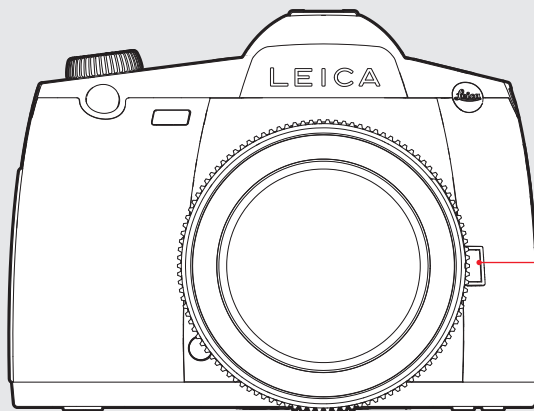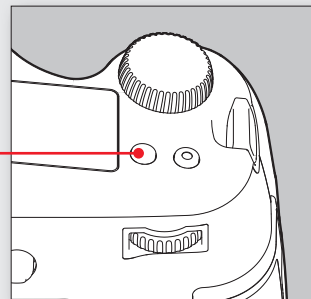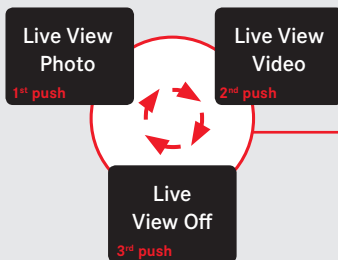


-  **Volume**
Hold + Joystick ◀▶
-  **Volume**
Hold + Joystick ◀▶

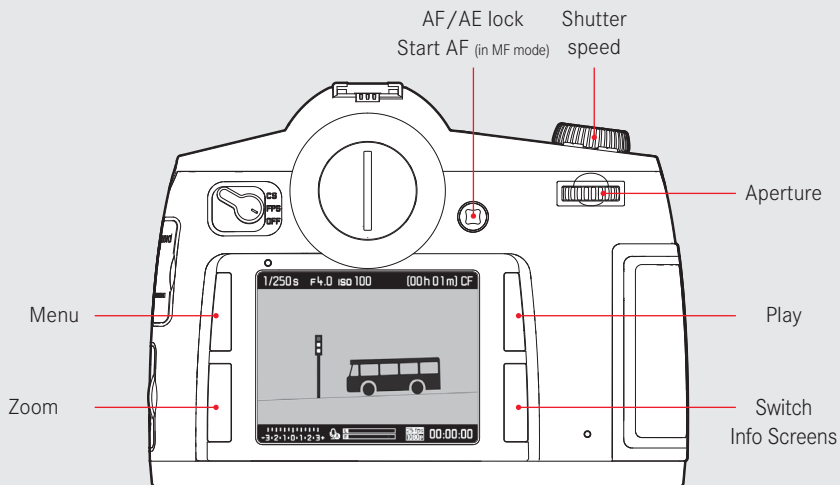

LIVEVIEW VIDEO - SCREENS

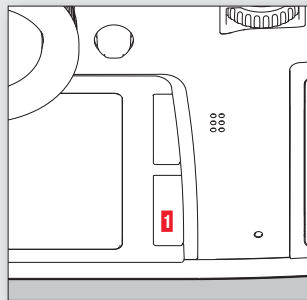


Full Screen

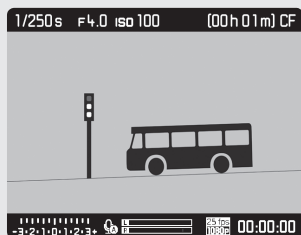


Histogram + Clipping




Info

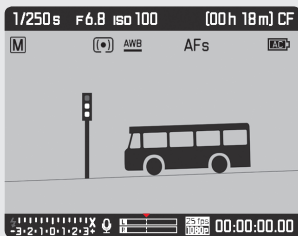

Focus Peaking

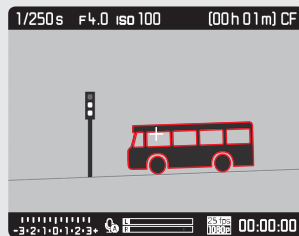


Grid + Horizon

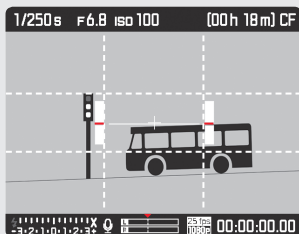



WLAN SETUP





On/Off

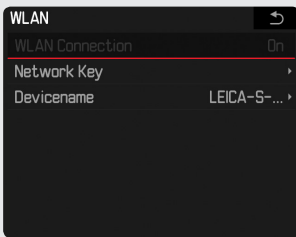

NETWORK KEY

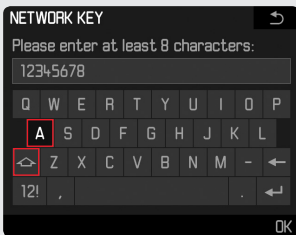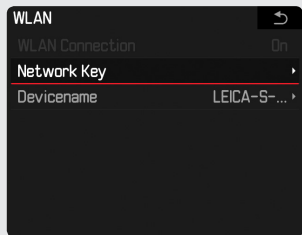


DEVICENAME

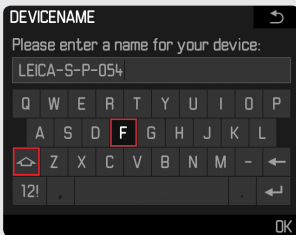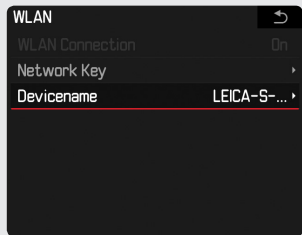

WLAN CONNECTION TO SMARTPHONE/TABLET


1. Activate **WiFi** on your iPhone or iPad.
2. Choose your Leica (SSID: **LEICA-S...**) from the Network list.
3. Return to the home screen and launch the Leica S app:

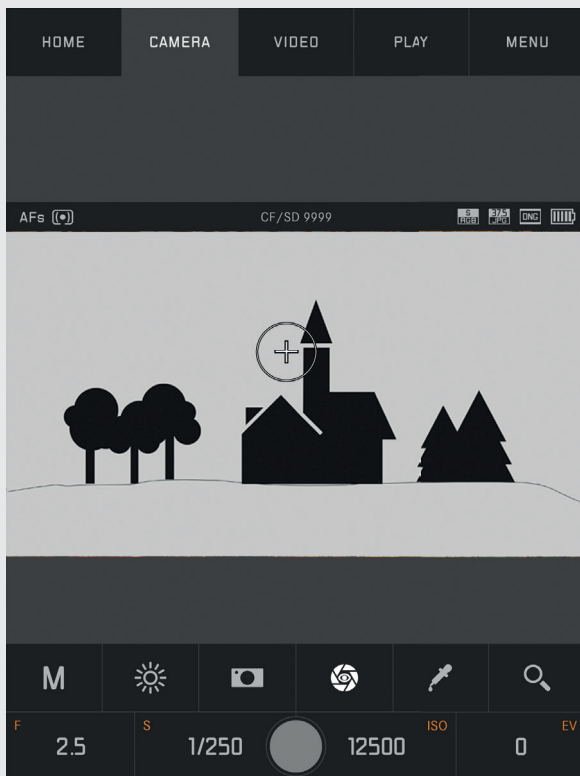

TETHERED SHOOTING - ADOBE™ PHOTOSHOP™ LIGHTROOM™ WORKFLOW


1. Connect the camera with your computer via USB cable.
2. Switch the camera on.
3. Start Adobe™ Photoshop™ Lightroom™.
4. Setup tethered shooting.



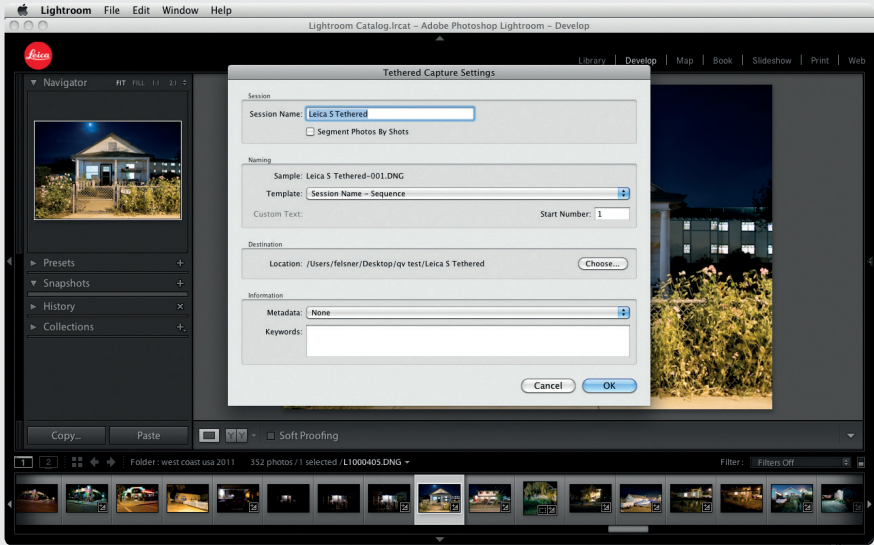


TETHERED SHOOTING - LEICA IMAGE SHUTTLE™ WORKFLOW

1. Connect the camera with your computer via USB cable (PTP storage mode).
2. Switch the camera on.
3. Start Leica Image Shuttle™.
4. Setup tethered shooting.

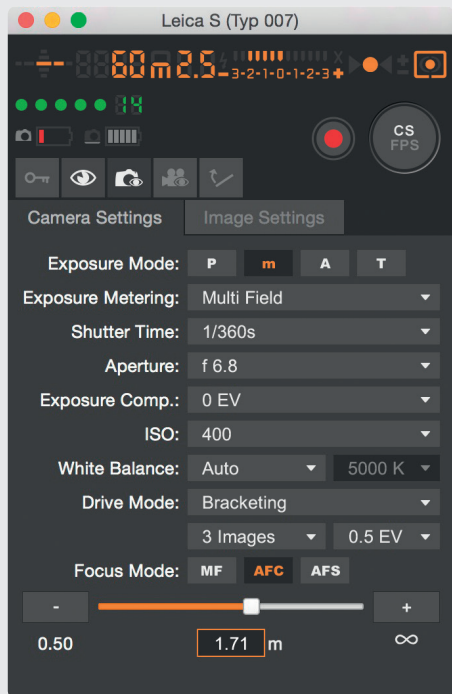


Remote Screen

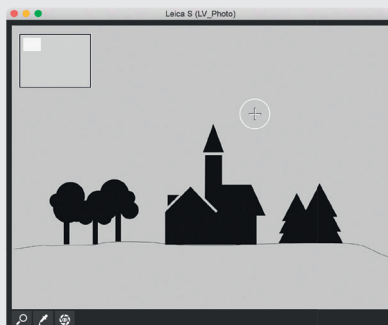

Liveview Photo



Liveview Video

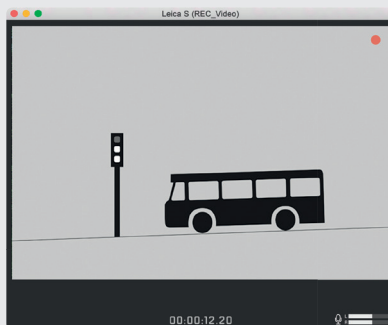




Recording Video

TIP

You can also use Leica Image Shuttle in combination with Adobe Bridge or with the hotfolder function of Adobe PS Lightroom.

MENU LIST

 CAMERA	Drive Mode
	Focus Mode
	Exp. Metering
	Exp. Compensation
	Exp. Bracketing
	Mirror Up Mode
	Max. Flash Sync. Time
 IMAGE	ISO
	White Balance
	Photo File Format
	JPG Resolution
	JPG Settings
	Video Resolution
	Video Setting
 SETUP	Storage Backup (CF & SD)
	Format Cards
	Image Numbering
	Auto Review
	Capture Assistants
	Copyright Information
	User Profiles
	Auto ISO Setup
	Flash Sync. Mode
	Keylock
	Customize Controls
	Display Brightness
	Acoustic Signals
	Auto Power Saving
	WLAN
	GPS
	Date & Time
	Language
	Reset Camera
	Sensor Cleaning
	Camera Information



my point of view

Leica Camera AG | Am Leitz-Park 5 | 35578 Wetzlar | DEUTSCHLAND
Telefon +49(0)6441-2080-0 | Telefax +49(0)6441-2080-333 | www.leica-camera.com